IMPORTANT BATTERY INFORMATION:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited
- Remove exhausted batteries from the toy. ٠
- Batteries should be replaced by adults.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.

Manufactured and distributed by WowWee Group Limited. Fingerlings® and all product names, designations and logos are trademarks of WowWee Group Limited. Copyright 2016-2018 WowWee Group Limited. All rights reserved. Patent Pending.

- Customer Service Website: https://support.wowwee.coms
- We recommend that you retain our address for future reference.
- Product and colors may vary.
- Packaging printed in Ching.
- WARNING! This product is not suitable for children under 3 years because of small parts - choking hazard.
- CAN ICES-3(B)/NMB-3(B)
- MADE IN CHINA

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or

WARNING: This product contains a coin or button cell battery. A coin or button cell battery can cause \triangle serious internal chemical burns if swallowed.

WARNING: Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and A potential perforation of the oesophagus. Dispose of used batteries immediately and safely. Flat batteries can still be dangerous. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



WowWee Canada Inc. WowWee Group Limited Energy Plaza, 301A-C 3700 Saint Patrick Street 92 Granville Road Suite 206 Montreal, QC, H4E 1A2, Canada T.S.T. East, Hong Kong







WowWee Canada Inc.

Customer Service:


Item No.:

Age:

More infomation on:

Manufactured and distributed by © 2016-2018 WowWee Group Limited All Rights Reserved. Patent Pending.

WowWee Group Limited. Energy Plaza, 301A-C, 92 Granville Road T.S.T. East, Hong Kong 3700 Saint Patrick Street, Suite 206, Montreal QC, H4E 1A2, Canada https://support.wowwee.com http://wowwee.com/fingerlings 3747 5+

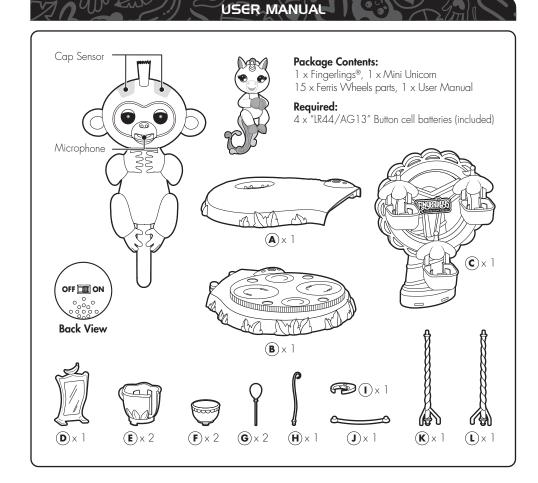

Please note the following when operating Fingerlings®:

- Do not immerse Fingerlings[®] or any of its parts in water or any other form of liquid.
- Do not drop, throw, or kick Fingerlings® as this may damage mechanical functions.
- Do not leave Fingerlings[®] unattended near edges from which it could fall.
- Assembly should be supervised by adults.

X

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or

• Connect the equipment into an outlet on a circuit different from that to

This Device complies with Part 15 of the FCC Rules. Operation is subject to

(2) This device must accept any interference received, including interference

Increase the separation between the equipment and receiver

• Consult the dealer or experienced radio/TV technician for help

(1) This device may not cause harmful interference, and

7855 Fav Avenue, Suite 310, La Iolla CA, USA 92037

For full list of inputs, please visit http://wowwee.com/fingerlings

For warranty information, please visit http://wowwee.com/information/warranty

WARNING! This equipment may experience difficulty and/or

reset the equipment should any of these occur

memory loss when subjected to any electrostatic

discharge, radio frequency interference, or sudder power surge/interruption. The user is encouraged to

more of the following measures:

the following two conditions:

WowWee USA Inc.


1-800-310-3033

which the receiver is connected

Reorient or relocate the receiving antenna

that may cause undesired operation.

For these purposes, the party responsible is:

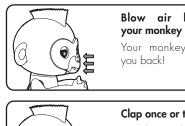


0

HOW TO PLAY

Blow air kisses to SLEEP MODE: To conserve energy, your Fingerlings® will enter sleep

 
mode after 5 minutes of inactivity. Flip the power switch Your monkey will kiss off and on again to bring your monkey back to life. vou back!





Pet your monkey's head 6 6 6

 2s



sensors (2s) For a silly surprise!

Cradle your monkey For sleepy reactions!


BATTERY INFORMATION

Hang your monkey

Explore your monkey's

upside down

silly side!

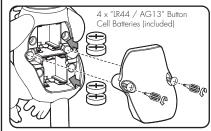

Fingerlings[®] Battery Diagram/Installation

Installing or changing batteries in Fingerlings®:

- 1. Lay Fingerlings® down so that the battery compartment faces upwards. Fingerlings® requires 4 x "LR44 / AG13" Button Cell Batteries (included).
- 2. Using a Phillips screwdriver (not included) remove the screws on the battery compartment cover.
- 3. Remove any existing batteries and insert new batteries according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
- 4. Replace the battery compartment cover and tighten screws using the screwdriver. Do not over-tighten.

LOW BATTERY INDICATORS:

When the batteries grow weak, Fingerlings[®] will become slow and unresponsive. When this happens. Power OFF and replace all batteries.

ASSEMBLY INSTRUCTION

